


KEYPAD USER MANUAL

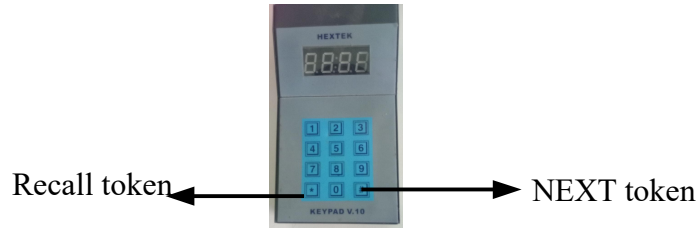

NO	FUNCTION	KEY NAME
1.	Next Token Call	NEXT
2.	Token Recall	RECALL
3.	Direct Token Call	TOKEN NUMBER + NEXT
4.	Reset Token	0 + NEXT
5.	Language Setting	Find Note1
6.	Keypad Type Setting	5 + RECALL + 0(Manual) / 1(Auto) + NEXT
7	Secondary Language Setting	0 + RECALL + 1(Eng) / 2(Hindi) / 3(Tamil) + NEXT
8	Ding Dong Bell	9 + RECALL + 7 + NEXT
9	Windows Bell	9 + RECALL + 8 + NEXT
10	Voice/Bell Disable	9 + RECALL + 9 + NEXT
11	Token Sequence Setting	8 + RECALL + 0(Disable) or 1(Enable) + NEXT
12	Keypad ID Setting	Find Note2

Note1: Language setting

Press 9 + RECALL, then any key 1 - 6 to select desired language as given below

KEY VALUE	LANGUAGE
1	ENGLISH
2	HINDI
3	TAMIL
4	TELUGU
5	KANNADA
6	MALAYALAM
7	DING DONG BELL
8	WINDOWS BELL
9	VOICE/BELL ALERT DISABLE

Note2: Device ID setting

Press key 7 + Recall, then press 0 + 1 then NEXT

Supoort:

Email:sales@hextek.in, Mobile:+918124976497, Whatsapp: +919444896273